



# Chair Rail Moldings


---

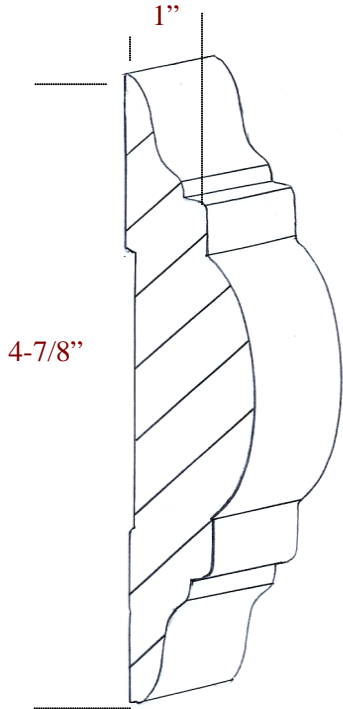


C-101

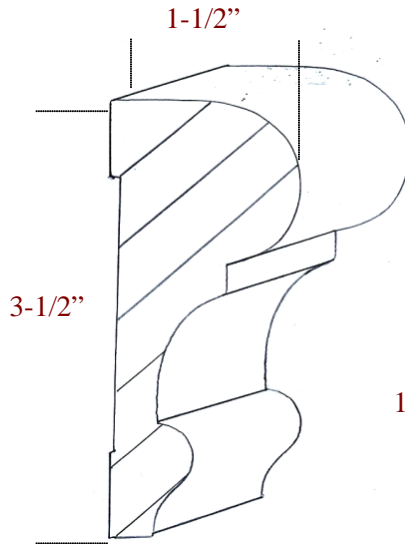


C-102

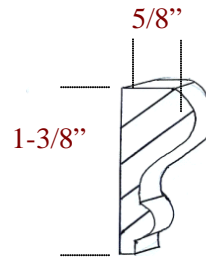


C-103

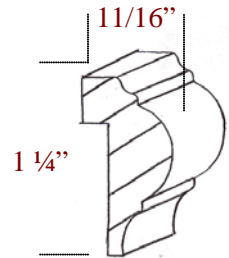


C-104

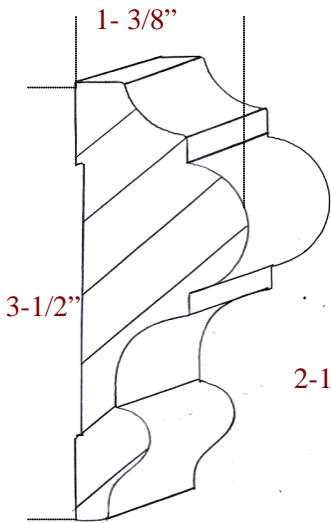


C-105

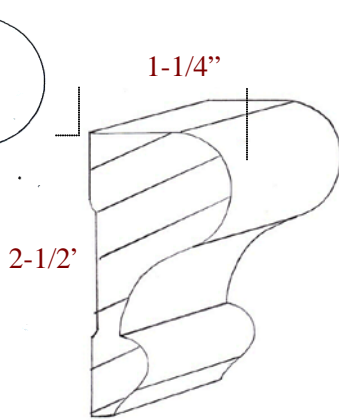


C-106

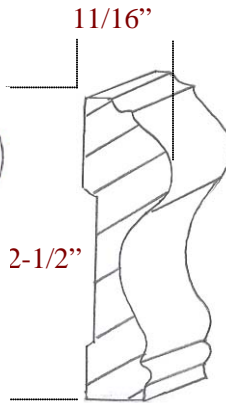

C-107


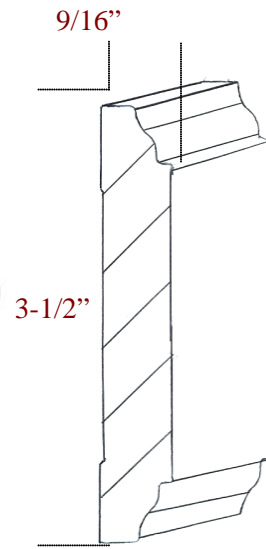


C-108

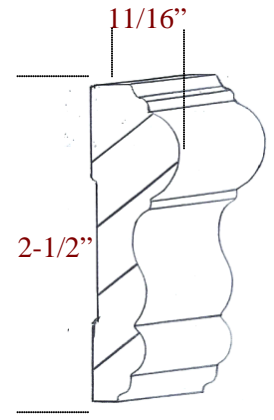


S-109  
Colonial


---

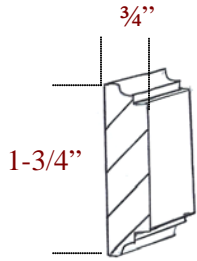


C-110

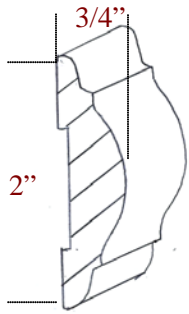


C-111

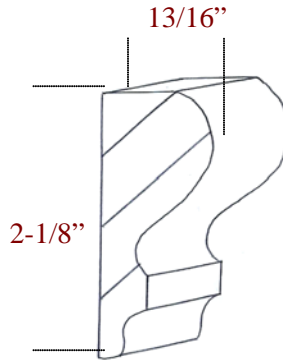


C-112

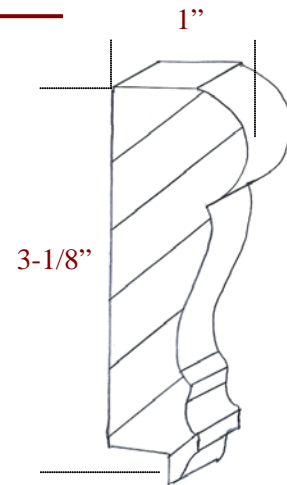


C-113

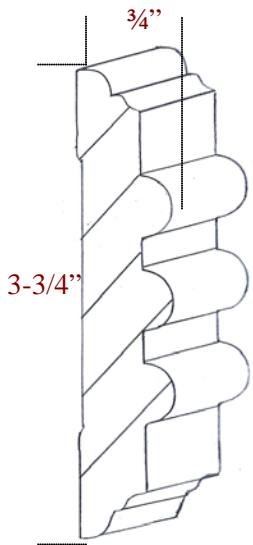


C-114

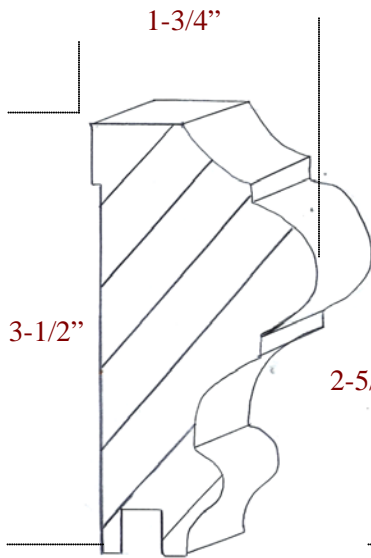


C-115

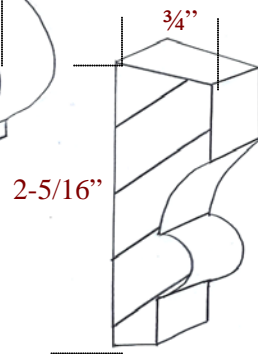



C-116

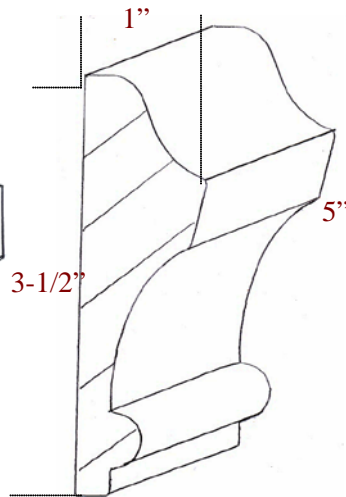


C-117

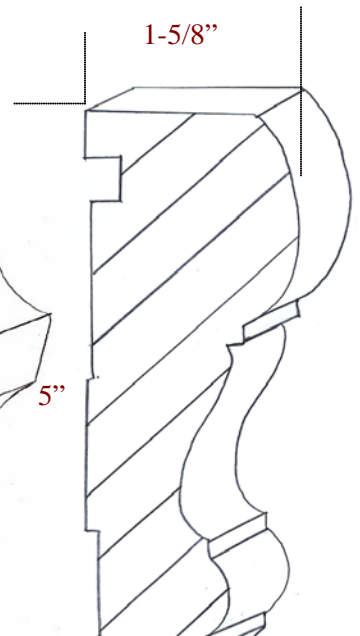


C-118

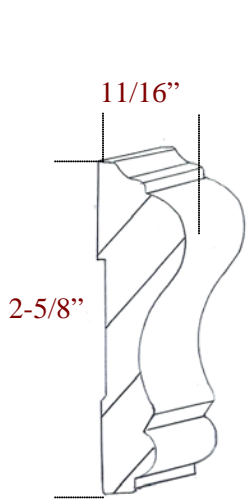


C-119  
Victorian

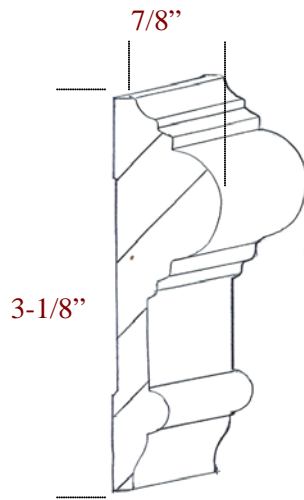


C-120

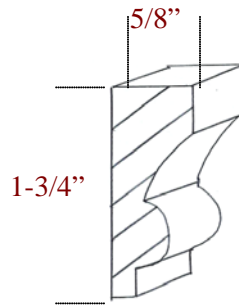


C-122

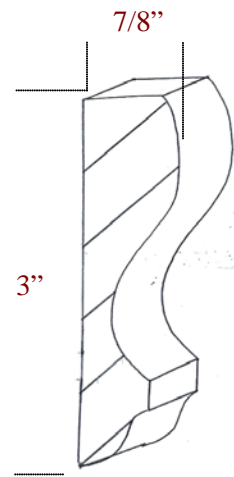


C-123

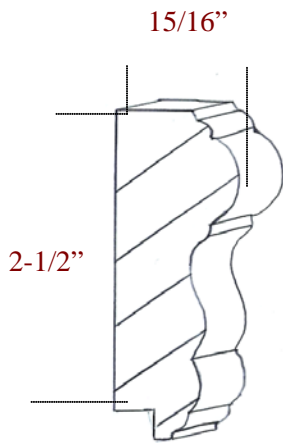


C-125

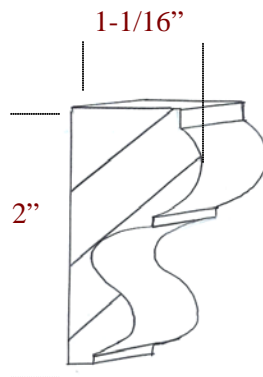


C-126

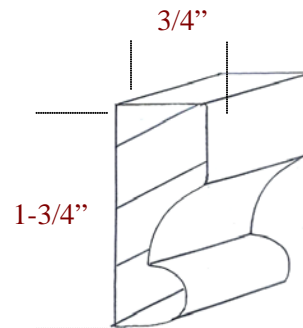


C-127

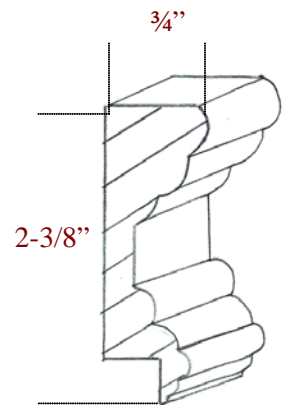

C-746

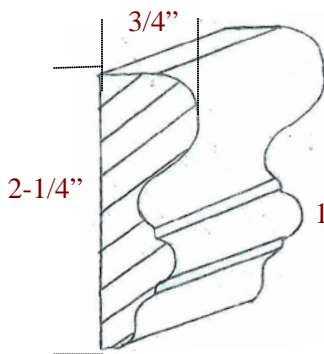



C-128

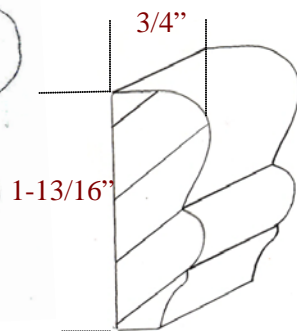


C-129




\*

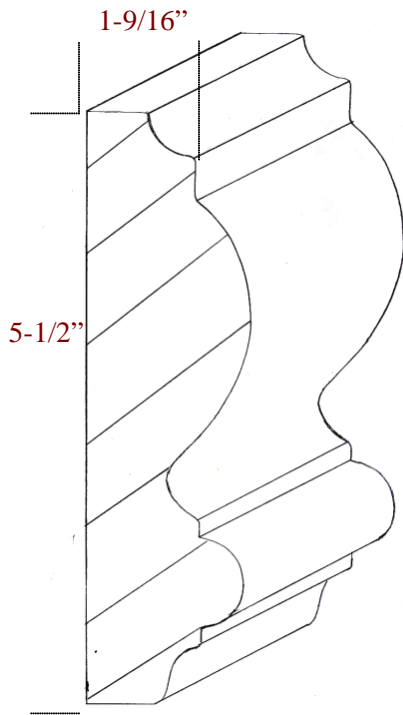


C-131

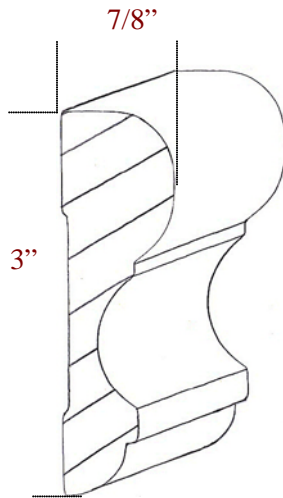


C-132

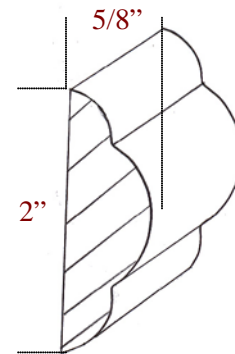


C-133

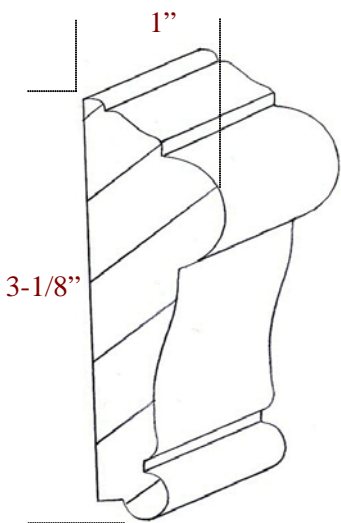


C-134

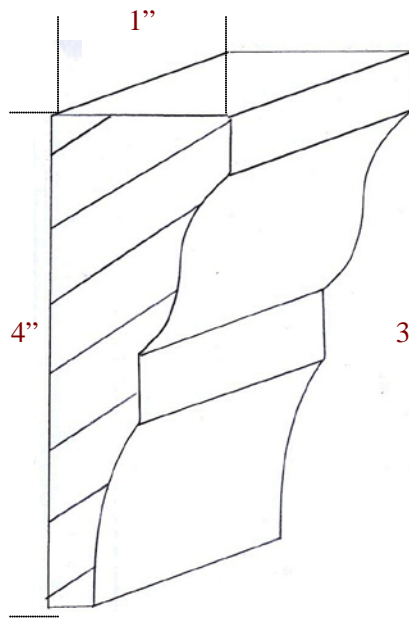


C-135

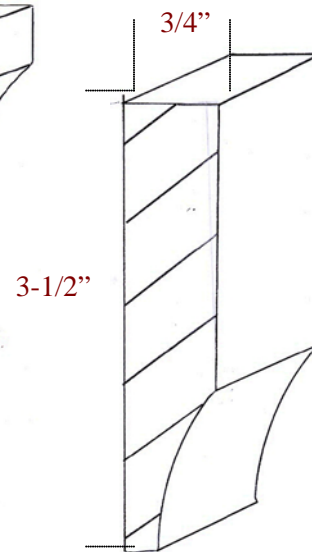


C-136

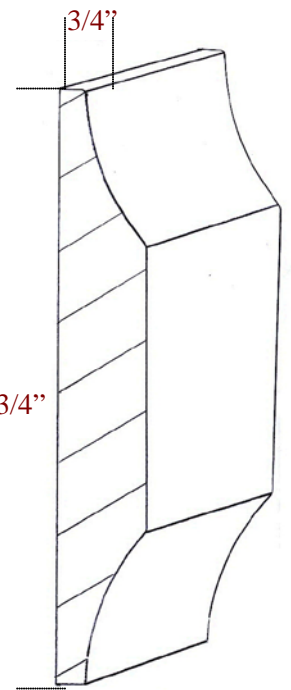


C-137

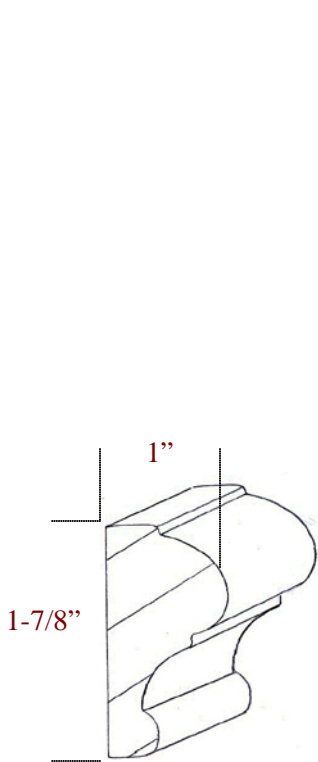


C-138

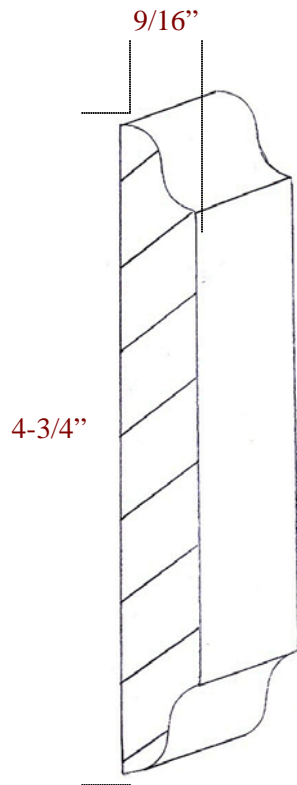


C-139

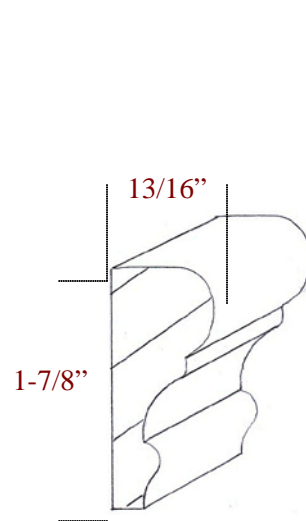


C-140

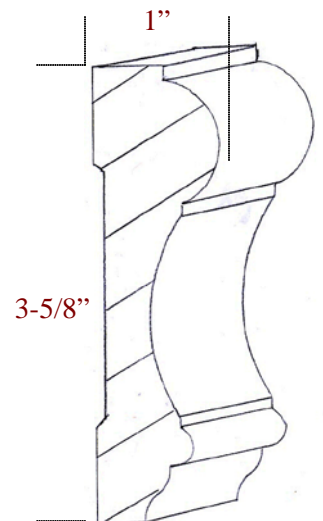


C-141

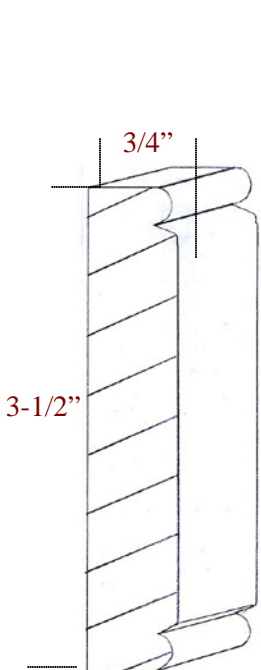


S-142

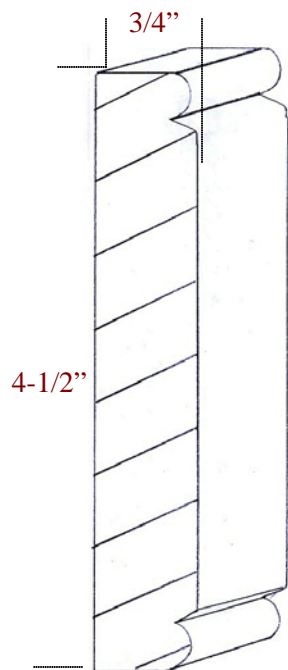


S-143

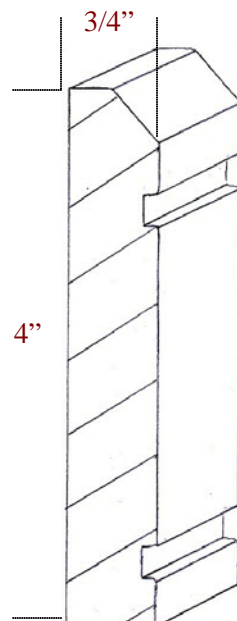


C-145

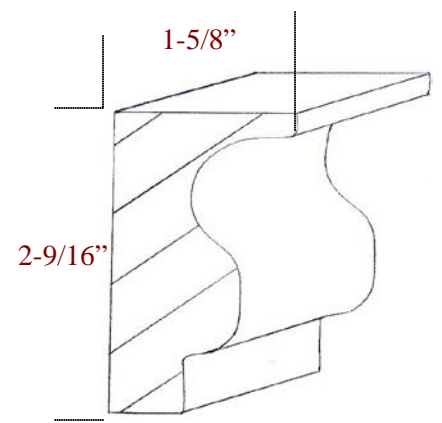


C-146

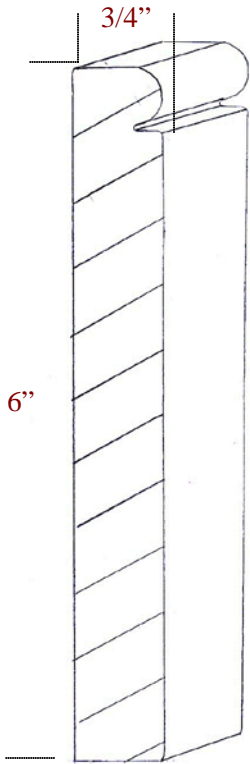


C-147

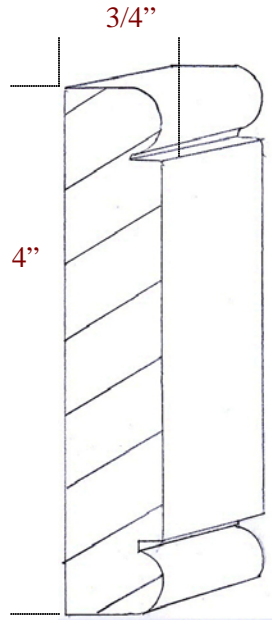


C-147A

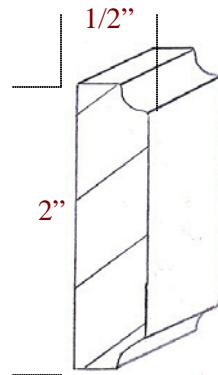


C-148

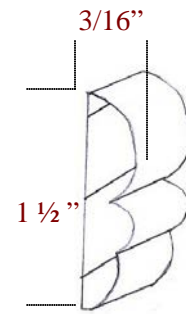


C-149

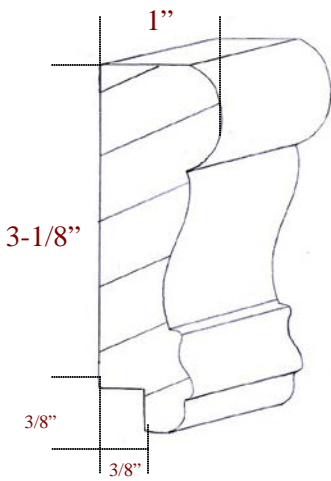


C-113A

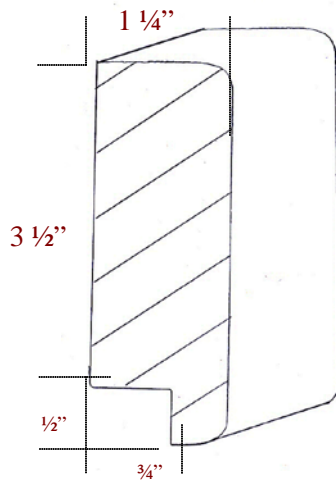



C-150

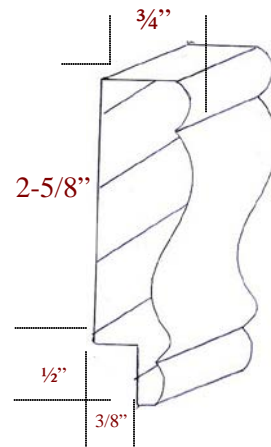


C-151

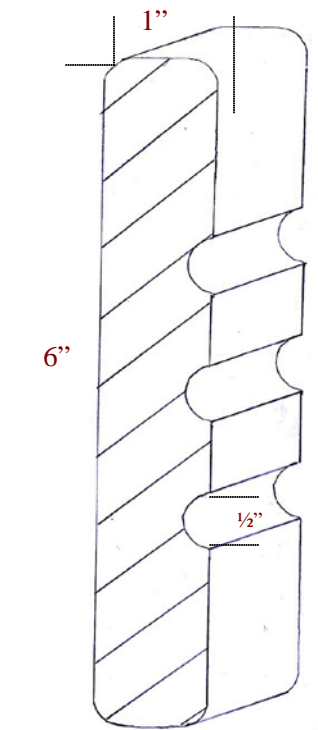


C-153

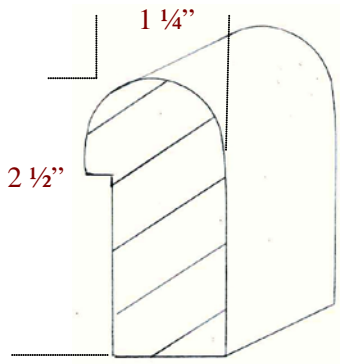

C-154

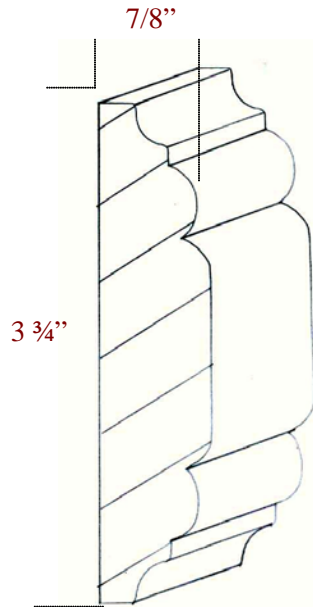

S-155

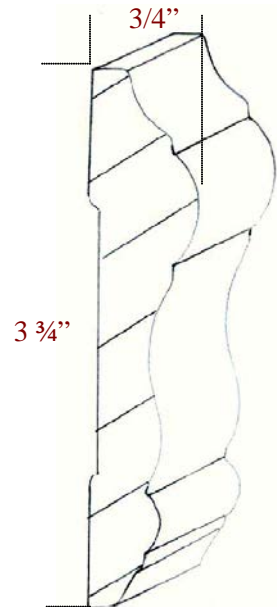

C-156